





Converting Bosworth Y-Valve from 2-port to 3-port Operation

Active Flow Path

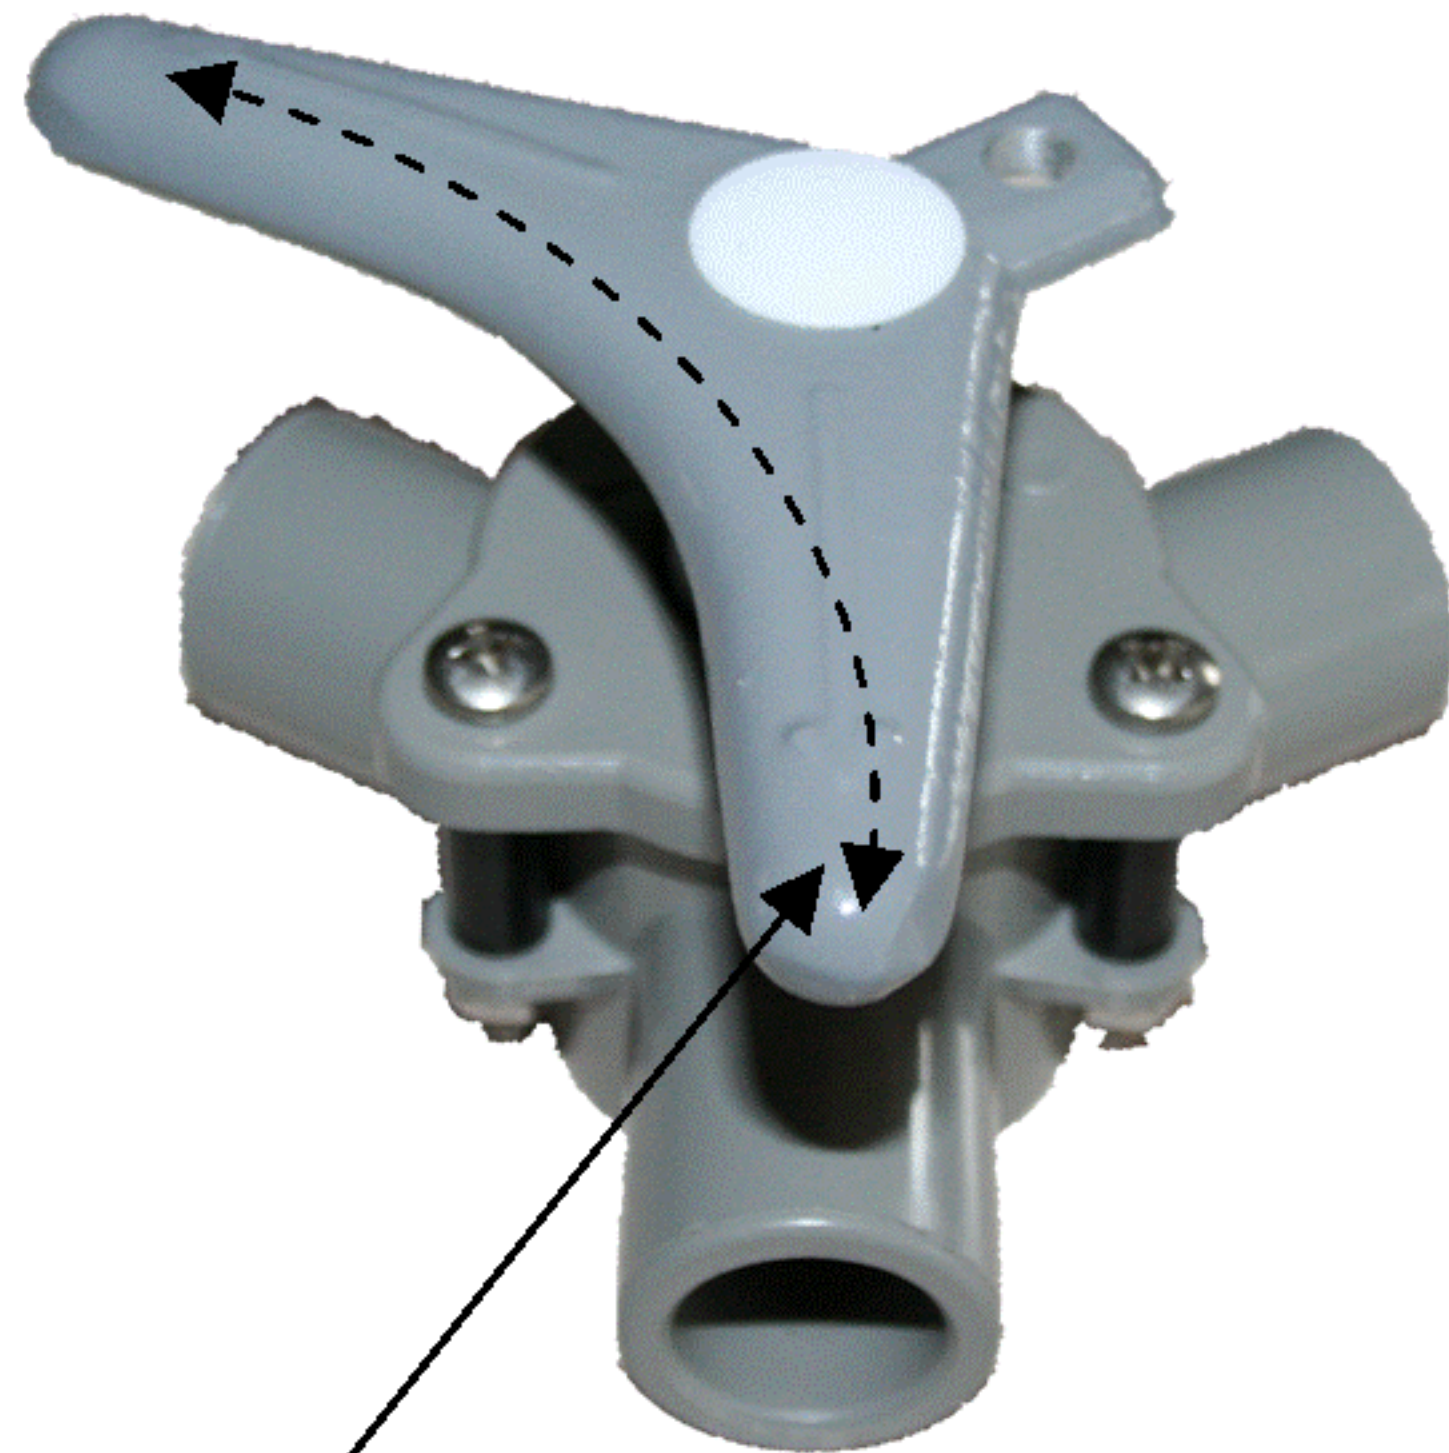

Arrows on handle show direction of flow for open ports.

Optional 2-Way or 3-Way Flow Mode

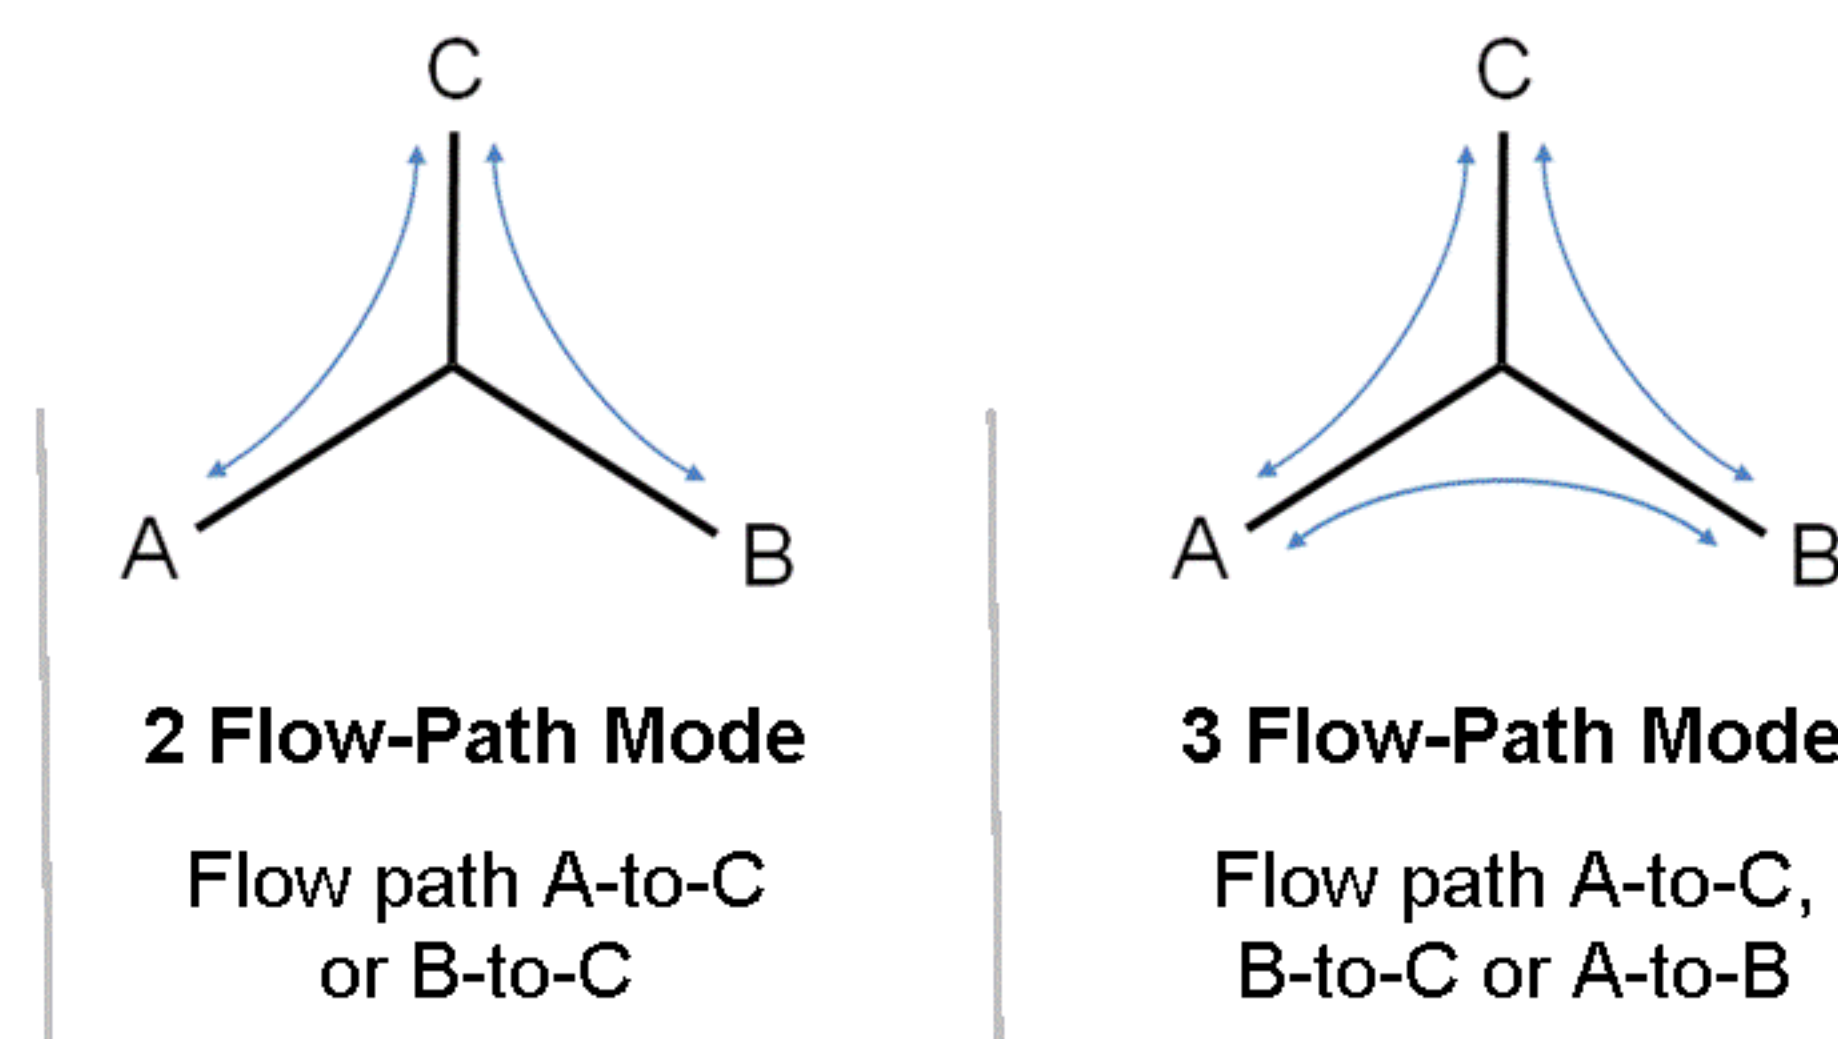

Question

"I have a Y-94 diverter valve that operates in a 2-way fashion. How do I convert it for full 3-port operation?"

Answer

Bosworth Y-valves have a removable valve travel stop that determines whether the valve operates as a 2-port or 3-port switch. These instructions show how easy it is to install or remove this travel stop.

Instructions for Removing Y-Valve Travel Stop

- 1) Remove white cap on top of Y-valve handle.
- 2) Remove screw beneath white cap and remove handle.
- 3) Remove 3 screws and black spacers attaching the bonnet to the body.
- 4) Remove travel stop. (Simply turn the Y-valve upside down and travel stop should fall out.)
- 5) Reassemble bonnet to body with 3 screws and spacers.
- 6) Reassemble handle to body and tighten screw.
- 7) Replace white cap on top of handle.

